# Quick Start Guide – ScanLogic D Series

Congratulations on the purchase of your new SECURAM ScanLogic D Series Lock! This Quick Start guide will help you set up your biometric safe lock for use. Note: <u>All programming must be completed with the safe door open. The safe lock system is powered by (1) 9V alkaline battery. Duracell or Energizer brands are recommended.</u>

Once the 9V battery is installed, the ScanLogic D Series is ready to enroll its first fingerprint. To activate the enrollment process, place your finger on the reader. The LED display will illuminate with this message:

> 12/17:13   8.4V
> ### Welcome!

- The Time and Date will appear on the screen.

> 12/17:13   8.4V
> ### 17:13:21
> 2/12/2015   Thurs
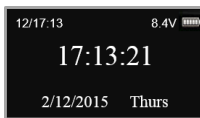
- Verify if the Time and Date is correct.

> 12/17:13   8.4V
> ### Set Time
> ### Press OK

- Each of the elements of the date and time will flash when it is available to be set. Use the "▲" or "▼" to scroll to the correct value and Press OK to move to the next element.

> 12/17:13   8.4V
> Start enrolling
> first user

> 12/17:13   8.4V
> ### Place
> ### Finger

- Place your finger on the optical reader and hold.

> 12/17:13   8.4V
> ### Enrolling

> 12/17:13   8.4V
> ### Checking

> 12/17:13   8.4V
> ### ID: 01
> ### Enrolled

- Hold your finger on the reader until the messages above appear. Your fingerprint is read, checked and enrolled.

- Note: This 1st fingerprint is the Administrator's fingerprint and will be used to manage the programming of this system
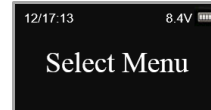
To Open Lock with your Fingerprint
- Place your finger on the optical reader.

> 12/17:13   8.4V
> ### Verifying

> 12/17:13   8.4V
> ### ID: 01
> ### Verified

> 12/17:13   8.4V
> ### Lock Open
> ### 06 sec

> 12/17:13   8.4V
> ### Door
> ### Closed

- Your fingerprint will be read, verified and the lock will open. That's it!

Set a User Code for the Enrolled Admin (ID 01-02)
- Press "Menu/OK". The screen will show "Select Menu".

> 12/17:13   8.4V
> ### Select Menu

- Press "▼" to select "System Menu", press "Menu/OK" again.

> 12/17:13   8.4V
> ### System Menu

> 12/17:13   8.4V
> ### Verify User

- Place the user's finger on the fingerprint scanner and hold.

- After the fingerprint is verified, press "▼" to select "Set/Change User Code", press "Menu/Ok".

- When the screen displays "New Code", enter a 6 digit code.

> 12/17:13   8.4V
> ### New Code

> 12/17:13   8.4V
> ### Repeat

- Enter the same 6 digit code again.
- The new code is now set successfully.

> 12/17:13   8.4V
> ### ID: 01
> ### Saved

To Open the Lock using your Code

- Enter 6 digit code.

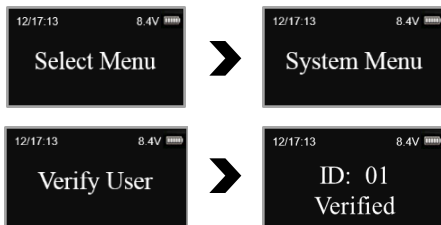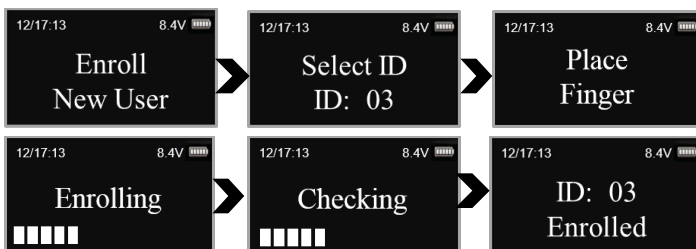| 12/17:13 8.4V	12/17:13 8.4V
Enter Code ******	ID: 01 Verified
Lock Open 06 sec	Door Closed
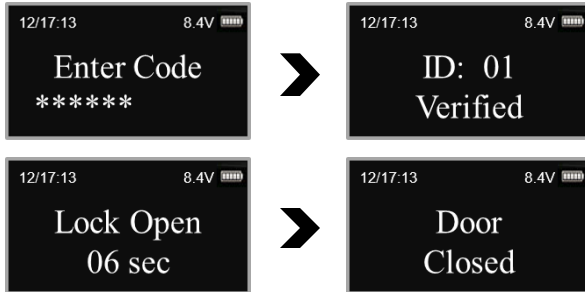
- Valid code will be verified and the lock will open. That's it!

Enroll a New User (ID 03-30)

- Press "Menu/OK". The screen will show "Select Menu".
- Press "▲" or "▼" to select "System Menu". Press "Menu/OK" again.

| 12/17:13 8.4V	12/17:13 8.4V
Select Menu	System Menu
Verify User	ID: 01 Verified

- Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold.
- After the fingerprint is verified successfully, the LCD screen shows: "Select Menu", press "▲" to select "Enroll New User". Press "Menu/OK".
- Select ID and press "▲" or "▼" to ID number and press "Menu/OK".
- Place a finger on the optical reader and hold.

12/17:13 8.4V	12/17:13 8.4V	12/17:13 8.4V
Enroll New User	Select ID ID: 03	Place Finger
Enrolling	Checking	ID: 03 Enrolled

- Hold finger on the reader until the messages above appear. The fingerprint is read, checked and enrolled

Enable User Code (ID03-30)

- Press "Menu/OK". The screen will show "Select Menu". Press "▲" or "▼" to select "System Menu". Press "Menu/OK" again.
- Place an enrolled administrator's finger (ID No. 01 or 02) on the scanner and hold. After the fingerprint is verified successfully, press "▲" or "▼" to select "Enable User Code", press "Menu/Ok".

| 12/17:13 8.4V	12/17:13 8.4V
Enable User Code	ID 03: Code Enable?
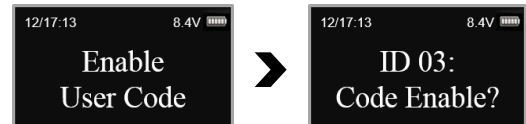
- The screen will display "ID:03 Code Enable?", press "▲" or "▼" to select the desired ID No. to be enabled. When the desired ID No. is visible on the screen, press "Menu/Ok" to select. This User ID will now have the ability to have a code in addition to an enrolled fingerprint.

Set User Code (ID03-30)

Important: The User must now set his own code using his enrolled fingerprint.

- Press "Menu/Ok", press "▲" or "▼" to select "System Menu". Enter the System Menu with the User's fingerprint (in this example using the fingerprint of ID No.3).
- Press "▲" or "▼" to select "Set/Change User Code".

12/17:13 8.4V	12/17:13 8.4V	12/17:13 8.4V
Set / Change User Code	New Code	Repeat
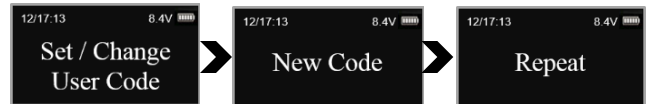
- Enter a unique 6 digit code.
- Enter the same 6 digit code.
- When the LCD screen displays: "ID:03 Code Saved", the code of ID:03 has been set successfully .
- Note: If consecutive four digits of a new code (for example 512341) is the same as one of the enrolled codes (612345) , LCD screen will show: "Code is similar" and the code will not be accepted. Enter a different code for this User.

For a full set of Operating Instructions please call (805) 988-8088 or email info@securamsys.com

---

IMPORTANT: Warranty Information

Your safe lock is eligible for a 12 month warranty covering product defects. Within 90 days of purchasing your safe/safe lock, please visit our website to register your product.

Please visit www.securamsys.com/warranty and look for the button entitled "Register My Warranty".